



RS485-USB Converter PIN OUTS

DB9 (PIN)	Output Signal	RS-422	RS-485
1	T/R+	(T+)	RS-485(+)
2	T/R-	(T-)	RS-485(-)
3	RXD+	(R+)	-----
4	RXD-	(R -)	-----
5	GND	GND	GND
6	N/A	-----	-----
7	N/A	-----	-----
8	N/A	-----	-----
9	EARTH	EARTH	EARTH

